

**Models:**

- 51304 – 15,000 RPM, 1/4" Collet
- 51305 – 18,000 RPM, 1/4" Collet
- 51306 – 20,000 RPM, 1/4" Collet
- 51307 – 24,000 RPM, 1/4" Collet
- 51314 – 15,000 RPM, 6mm Collet
- 51315 – 18,000 RPM, 6mm Collet
- 51316 – 20,000 RPM, 6mm Collet
- 51317 – 24,000 RPM, 6mm Collet

# .5 Hp/Straight Line/Rear Exhaust Die Grinder

*Air Motor and Machine Parts*


## ! WARNING

Always operate, inspect and maintain this tool in accordance with the Safety Code for portable air tools (ANSI B186.1) and any other applicable safety codes and regulations. Please refer to Dynabrade's Warning/Safety Operating Instructions for more complete safety information.

| <b>KEY</b> |   |
|------------|---|
| <b>O</b>   | Oil: O <sub>1</sub> = Air Lube          |
| <b>A</b>   | Adhesive: A <sub>8</sub> = Loctite #567 |
| <b>T</b>   | Torque: N•m x 8.85 = In. - lbs.         |

### Index Key

| No. | Part #                  | Description                  |
|-----|-------------------------|------------------------------|
| 1   | 50010                   | 1/4" Collet Assy.            |
|     | 50015                   | 6mm Collet Assy.             |
| 2   | 04102                   | Lock Ring                    |
| 3   | 53175                   | Insulator Collar             |
| 4   | 04066                   | Felt Silencer                |
| 5   | 04069                   | Block Plate                  |
| 6   | 04081                   | Rotor Nut                    |
| 7   | 01007                   | Bearing                      |
| 8   | 01121                   | Shim Pack (3/pkg.)           |
| 9   | 01008                   | Bearing Plate                |
| 10  | 50767                   | Pin (2)                      |
| 11  | 01010                   | Rotor Spacer                 |
| 12  | 01013                   | Cylinder                     |
| 13  | 01011                   | Blade (4/pkg.)               |
| 14  | 01120                   | Rotor                        |
| 15  | 01245                   | Bearing Plate                |
| 16  | 01015                   | Bearing                      |
| 17  | 30427                   | Housing – 51304              |
|     | 30428                   | Housing – 51305              |
|     | 30429                   | Housing – 51306              |
|     | 30430                   | Housing – 51307              |
|     | 30435                   | Housing – 51314              |
|     | 30436                   | Housing – 51315              |
|     | 30437                   | Housing – 51316              |
|     | 30438                   | Housing – 51317              |
| 18  | 57342                   | Throttle Lever               |
|     | 01089                   | Safety Lock Lever (optional) |
| 19  | 01017                   | Pin                          |
| 20  | 95558                   | Retaining Ring               |
| 21  | 01477                   | Valve Stem                   |
| 22  | 95730                   | O-Ring                       |
| 23  | 01024                   | O-Ring                       |
| 24  | 01247                   | Speed Regulator Assy.        |
| 25  | 01464                   | Seal                         |
| 26  | 01472                   | Tip Valve                    |
| 27  | 01468                   | Spring                       |
| 28  | <b>Air Control Ring</b> |                              |
|     | 01643                   | 15,000 RPM                   |
|     | 01642                   | 18,000 RPM                   |
|     | 01606                   | 20,000 RPM                   |
|     | 01564                   | 24,000 RPM                   |
| 29  | 95711                   | Retaining Ring               |
| 30  | 95438                   | O-Ring                       |
| 31  | 94521                   | Muffler Base                 |
| 32  | 94524                   | Sintered Muffler             |
| 33  | 94525                   | Felt Muffler                 |
| 34  | 94522                   | Muffler Cap                  |
| 35  | 95375                   | O-Ring                       |
| 36  | 94526                   | Spacer                       |
| 37  | 94523                   | Inlet Adapter                |
| 38  | 94520                   | Muffler Assembly             |

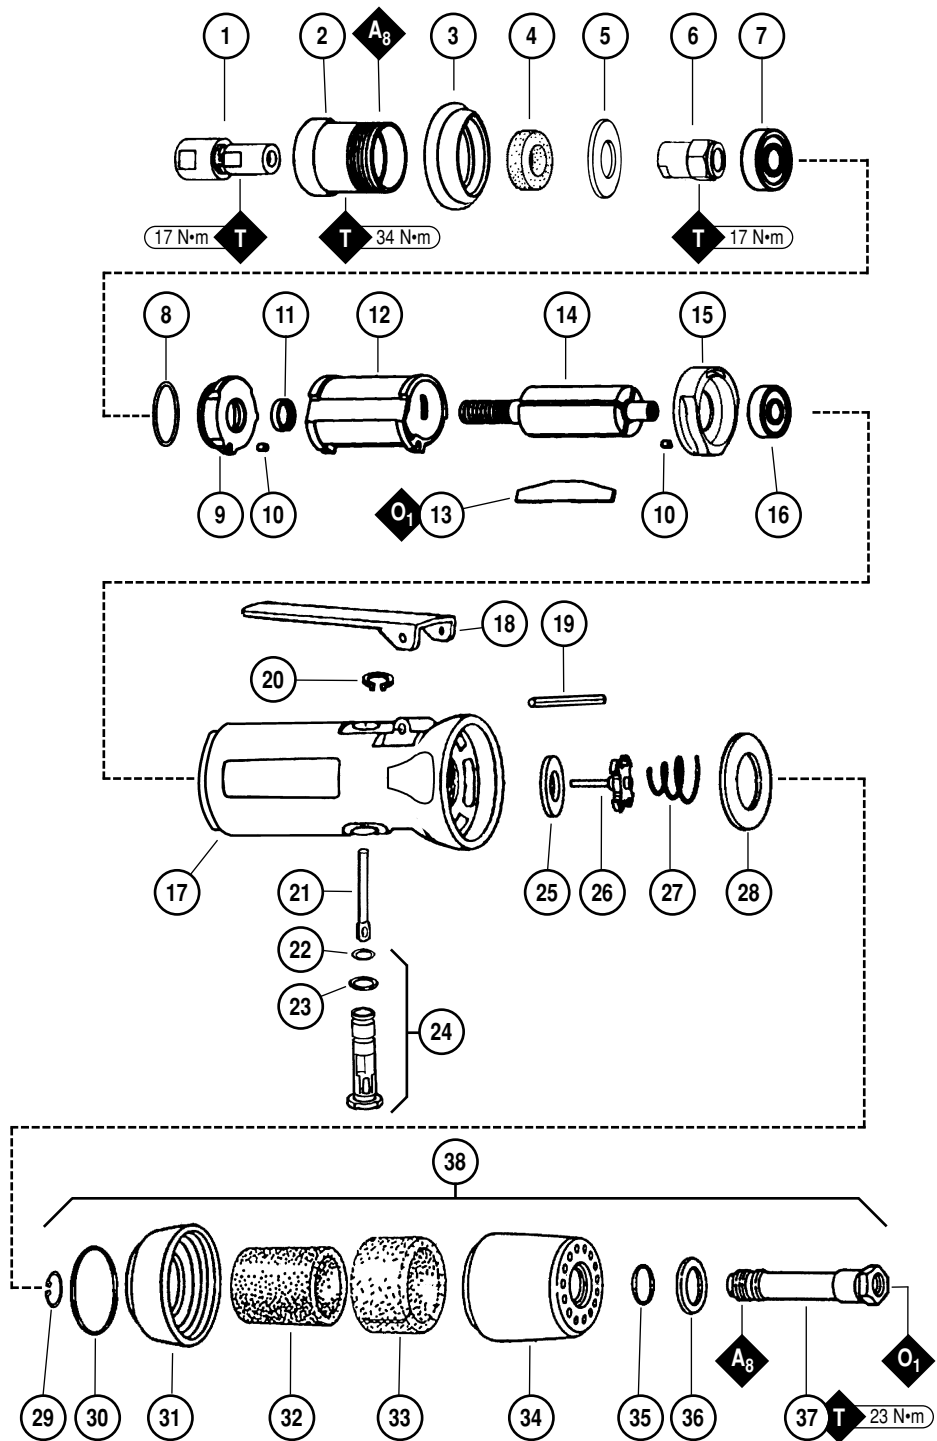

See reverse side for Accessories and Important Operating, Maintenance and Safety Instructions.

# Important Operating, Maintenance and Safety Instructions

Carefully read all instructions before operating or servicing any Dynabrade® Abrasive Power Tool.

**Warning:** Hand, wrist and arm injury may result from repetitive work motion and overexposure to vibration.

**Important:** All Dynabrade rotary vane air tools must be used with a Filter-Regulator-Lubricator to maintain all warranties.

## Operating Instructions:

**Warning:** Eye, face, respiratory, sound and body protection must be worn while operating power tools. Failure to do so may result in serious injury or death. Follow safety procedures posted in workplace.

1. With power source disconnected from tool, securely fasten abrasive/accessory on tool.
2. Install air fitting into inlet bushing of tool. **Important:** Secure inlet bushing of tool with a wrench before attempting to install the air fitting to avoid damaging valve body housing.
3. Connect power source to tool. Be careful not to depress throttle lever in the process.
4. Check tool speed with tachometer. If tool is operating at a higher speed than the RPM marked on the tool or operating improperly, the tool should be serviced to correct the cause before use.

## Maintenance Instructions:

1. Check tool speed regularly with a tachometer. If tool is operating at a higher speed than the RPM marked on the tool, the tool should be serviced to correct the cause before use.
2. Some silencers on air tools may clog with use. Clean and replace as required.
3. All Dynabrade rotary vane air motors should be lubricated. Dynabrade recommends one drop of air lube per minute for each 10 SCFM (example: if the tool specifications state 40 SCFM, set the drip rate of your filter-lubricator at 4 drops per minute). Dynabrade Air Lube (P/N **95842**: 1 pt. 473 ml.) is recommended.
4. It is strongly recommended that all Dynabrade rotary vane air tools be used with a Filter-Regulator-Lubricator to minimize the possibility of misuse due to unclean air, wet air or insufficient lubrication. Dynabrade recommends the following: **11405** Air Line Filter-Regulator-Lubricator — Provides accurate air pressure regulation, two-stage filtration of water contaminants and micro-mist lubrication of pneumatic components. Operates 40 SCFM @ 100 PSIG has 3/8" NPT female ports.
5. Use only genuine Dynabrade replacement parts. To reorder replacement parts, specify the **Model #**, **Serial #**, and **RPM** of your machine.
6. A Motor Tune-Up Kit (P/N **96530**) is available which includes assorted parts to help maintain motor in peak operating condition.
7. Mineral spirits are recommended when cleaning the tool and parts. Do not clean tool or parts with any solvents or oils containing acids, esters, ketones, chlorinated hydrocarbons or nitro carbons.

## Safety Instructions:

Products offered by Dynabrade should not be converted or otherwise altered from original design without expressed written consent from Dynabrade, Inc.



- **Important:** User of tool is responsible for following accepted safety codes such as those published by the American National Standards Institute (ANSI).
- Operate machine for one minute before application to workpiece to determine if machine is working properly and safely before work begins.
- Always disconnect power supply before changing abrasive/accessory or making machine adjustments.
- Inspect abrasives/accessories for damage or defects prior to installation on tools.
- Please refer to Dynabrade's Warning/Safety Operating Instructions Tag (Reorder No. **95903**) for more complete safety information.
- **Warning:** Hand, wrist and arm injury may result from repetitive work, motion and overexposure to vibration.

## Notice

All Dynabrade motors use the highest quality parts and metals available and are machined to exacting tolerances. The failure of quality pneumatic motors can most often be traced to an unclean air supply or the lack of lubrication. Air pressure easily forces dirt or water contained in the air supply into motor bearings causing early failure. It often scores the cylinder walls and the rotor blades resulting in limited efficiency and power. Our warranty obligation is contingent upon proper use of our tools and cannot apply to equipment which has been subjected to misuse such as unclean air, wet air or a lack of lubrication during the use of this tool.

## One Year Warranty

Following the reasonable assumption that any inherent defect which might prevail in a product will become apparent to the user within one year from the date of purchase, all equipment of our manufacture is warranted against defects in workmanship and materials under normal use and service. We shall repair or replace at our factory, any equipment or part thereof which shall, within one year after delivery to the original purchaser, indicate upon our examination to have been defective. Our obligation is contingent upon proper use of Dynabrade tools in accordance with factory recommendations, instructions and safety practices. It shall not apply to equipment which has been subject to misuse, negligence, accident or tampering in any way so as to affect its normal performance. Normally wearable parts such as bearings, sanding pads, rotor blades, etc., are not covered under this warranty.

| Model Number | Motor HP (W) | Motor RPM | Air Inlet Thread | Sound Level | Air Flow Rate CFM/SCFM (LPM) | Air Pressure PSIG (Bars) | Spindle Thread | Weight Pound (kg) | Length Inch (mm) | Height Inch (mm) |
|--------------|--------------|-----------|------------------|-------------|------------------------------|--------------------------|----------------|-------------------|------------------|------------------|
| 51304/51314  | .5 (373)     | 15,000    | 1/4" NPT         | 79 dB(A)    | 4/25 (708)                   | 90 (6.2)                 | 3/8"-24 male   | 1.8 (.8)          | 9-1/4 (235)      | 1-7/8 (48)       |
| 51305/51315  | .5 (373)     | 18,000    | 1/4" NPT         | 79 dB(A)    | 4/26 (736)                   | 90 (6.2)                 | 3/8"-24 male   | 1.8 (.8)          | 9-1/4 (235)      | 1-7/8 (48)       |
| 51306/51316  | .5 (373)     | 20,000    | 1/4" NPT         | 82 dB(A)    | 4/27 (765)                   | 90 (6.2)                 | 3/8"-24 male   | 1.8 (.8)          | 9-1/4 (235)      | 1-7/8 (48)       |
| 51307/51317  | .5 (373)     | 24,000    | 1/4" NPT         | 79 dB(A)    | 4/27 (765)                   | 90 (6.2)                 | 3/8"-24 male   | 1.8 (.8)          | 9-1/4 (235)      | 1-7/8 (48)       |

Additional Specifications: Hose I.D. Size 3/8" or 10mm

# **Disassembly/Assembly Instructions – .5 Hp Rear Exhaust**

**Important:** Manufacturer's warranty is void if tool is disassembled before warranty expires.

## **Motor Disassembly:**

1. Disconnect tool from power source.
2. Secure air tool in vise using flats on housing.
3. With an adjustable pin wrench or **50971** Lock Ring Wrench remove **04102** Lock Ring by turning counter-clockwise. Remove **04066** Felt Silencer and **04069** Block Plate.
4. Remove collet and rotor nut from rotor shaft by inserting a 3/16" hex wrench through collet body and into rotor shaft. Twist collet and rotor nut from shaft.
5. Remove **01013** Cylinder, blades (4) and **01010** Spacer from rotor. **Note:** **01007** Bearing, **01008** Front Bearing Plate and spacer are a slip fit onto rotor.
6. Press rotor from **01245** Rear Bearing Plate. Press **01015** Bearing from bearing plate.

**Motor Disassembly Complete.**

## **Valve Body Disassembly:**

1. Position valve body in vise with air inlet pointing up.
2. Remove air fitting by securing **94523** Inlet Adapter with a wrench and twist air fitting from inlet adapter.  
**Important:** **94523** Inlet Adapter must be secured before attempting to remove air fitting to avoid damaging valve body housing.
3. Remove **94523** Inlet Adapter.
4. Remove **95711** Retaining Ring from inlet adapter and separate **94521** Muffler Base from **94522** Muffler Cap. Remove sintered muffler and felt muffler.
5. Remove air control ring from valve body. Using needle nose pliers, remove **01468** Spring, **01472** Tip Valve and **01464** Seal.
6. Using a 2.5mm drift pin, tap **01017** Pin from housing and remove throttle lever.
7. Remove **95558** Retaining Ring. Push **01247** Speed Regulator Assembly from valve body and remove o-rings.

**Disassembly complete.**

## **Motor Assembly:**

**Important:** Be sure parts are clean and in good repair before assembling.

1. Place rotor in padded vise with a threaded spindle facing upwards.
2. Slip **01010** Spacer onto rotor.
3. Place a .002" shim into front bearing plate as an initial spacing and slip **01007** Bearing into plate. **Note:** **01121** Shim Pack contains .001" and .002" shims.
4. Install bearing/bearing plate assembly onto rotor.
5. Install **04081** Rotor Nut onto collet assembly.
6. Tighten collet assembly and rotor nut onto rotor (torque to 17 N•m/150 in. - lbs.).
7. Check clearance between rotor and bearing plate by using a .001" feeler gauge. Clearance should be at .001" to .0015". Adjust clearance by repeating steps 1-5 with different shim if necessary.
8. Once proper rotor/gap clearance is achieved, install well lubricated **01011** Blades (4) into rotor slots. Dynabrade Air Lube P/N **95842** is recommended.
9. Install cylinder over rotor. Be sure air inlet holes of cylinder face away from bearing plate.
10. Press **01015** Rear Bearing into **01245** Rear Bearing Plate. Press bearing/bearing plate assembly onto rotor. Be sure that pin and air inlet holes line-up with pin slot and air inlet holes in cylinder. **Important:** Fit must be snug between bearing plates and cylinder. If too tight, rotor will not turn freely. Rotor must then be lightly tapped at press fit end so it will turn freely while still maintaining a snug fit. A loose fit will not achieve the proper preload of motor bearings.
11. Secure motor housing in padded vise so motor cavity faces upwards.
12. Install motor assembly into housing. Be sure motor drops all the way into housing.
13. Insert **04069** Block Plate and **04066** Felt Silencer into **04102** Lock Ring and install onto motor housing (torque 17 N•m/150 in. - lbs.).
14. Motor adjustment must now be checked. With motor housing still mounted in vise, pull end of rotor and twist (10-15 lbs. force), rotor should turn freely without drag. If drag or rub is felt, then increase preload or remove shim. Also, push end of rotor and twist (10-15 lbs. force), rotor should turn freely without drag. If drag or rub is felt, then deload or add shim.

## **Valve Body Assembly:**

1. Insert **01247** Speed Regulator Assembly with o-rings and valve stem in place into valve body. Secure with **95558** Retaining Ring.
2. Secure valve body in vise with air inlet pointing up. Insert **01464** Seal.
3. Line up hole in valve stem with hole in housing (looking past brass bushing). Insert **01472** Tip Valve so that the metal pin passes through the hole in the valve stem. Install **01468** Spring (small end towards tip valve).
4. Assemble sintered muffler and felt muffler together and place in **94522** Muffler Cap. Install **94521** Muffler Base onto muffler cap.
5. Install **95438** O-Ring into groove on muffler base. Place **95375** O-Ring and **94526** Spacer into recessed area of muffler cap.
6. Slip **94523** Inlet Adapter through muffler assembly and install **95711** Retainer Ring into groove on inlet adapter.
7. Install air control ring into valve body housing.
8. Apply Loctite® #567 PST Pipe Sealant to threads of **94523** Inlet Adapter and install entire muffler assembly onto valve body (torque 23.0 N•m/200 in. - lbs.).
9. Replace air fitting. Secure inlet adapter with a wrench before tightening air fitting. Install throttle lever and **01017** Pin.

**Tool Assembly Complete. Please allow 30 minutes for adhesives to cure before operating tool.**

**Important:** Motor should now be tested for proper operation at 90 PSIG. If motor does not operate properly or operates at a higher RPM than marked on the tool, the tool should be serviced to correct the cause before use. Before operating, place 2-3 drops of Dynabrade Air Lube (P/N **95842**) directly into air inlet with throttle lever depressed. Operate tool for 30 seconds to determine if tool is operating properly and to allow lubricating oils to properly penetrate motor.

Loctite® is a registered trademark of Loctite Corp.

## Optional Accessories



**53032** – 1/4" Drill Chuck  
Includes: **53052** Mated Chuck Key



### Collet Inserts

- **50013** – 1/4"
- **50014** – 3/8"
- **50016** – 6mm
- **50039** – 8mm
- **50065** – 1/8"



**Dynamswivel®**  
Swivels 360° at two locations which allows an air hose to drop straight to the floor, no matter how the tool is held.

- **94300** 1/4" NPT



### 96530 Motor Tune-Up Kit:

- Includes assorted parts to help maintain and repair motor.



### Dynabrade Air Lube

- Formulated for pneumatic equipment.
- Absorbs up to 10% of its weight in water.
- Prevents rust and formation of sludge.
- Keeps pneumatic tools operating longer with greater power and less down time.

**95842:** 1pt. (473 ml)


**95843:** 1 gal. (3.8L)



### 50971 Lock Ring Tool

- Lock Ring Tool has a 3/8 in. square socket for use with 3/8 in. drive; breaker bar, ratchet head, or torque wrenches.

## Wrenches

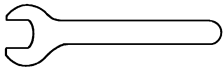

**95262** – 14mm open-end.  
**95281** – 19mm open-end.

Visit Our Web Site: [www.dynabrade.com](http://www.dynabrade.com)

Email: [Customer.Service@Dynabrade.com](mailto:Customer.Service@Dynabrade.com)



**DYNABRADE, INC.,** 8989 Sheridan Drive • Clarence, NY 14031-1490 • Phone: (716) 631-0100 • Fax: 716-631-2073 • International Fax: 716-631-2524  
**DYNABRADE EUROPE S.à.r.l.,** Zone Artisanale • L-5485 Wormeldange—Haut, Luxembourg • Telephone: 352 76 84 94 1 • Fax: 352 76 84 95 1

©DYNABRADE, INC., 2005

PRINTED IN USA

PD01.79\_Rev.2\_05/05